

# Fiberglass Mat Reinforced Mortar Vinyl Ester Lining (MCK)

# Series 252SC

# Installation Procedure



Series 252SC is a 125 mil trowel-applied, fiberglass mat reinforced, multi-functional, novolac vinyl ester secondary containment system.

# 2.0 OVERVIEW

The purpose of this guide is to acquaint contractors and applicators with the basic information necessary for properly ordering and installing Tnemec coatings for concrete secondary containment for water and wastewater. Prior to starting work, please read this entire guide carefully. If you have questions, contact your Tnemec representative or call Tnemec Technical Service at 1-800-TNEMEC1. It is important that you obtain answers to any questions before work begins.

Please review all pertinent product data sheets as well as construction detail drawings.

Also, reference the project specifications and compare them with this guide and the product data sheets. Resolve any inconsistencies prior to starting work.

This Installation Guide cannot cover every issue that may be encountered in the field. If issues arise that are not addressed in this guide or the product data sheets, please contact your Tnemec representative or call 1-800-TNEMEC1 for assistance.


#### **System Overview**

- Primer: Series 251SC at 4.0 12.0 mils
- Base Coat: Series 252SC (Mortar) at 60.0 80.0 mils
- Fiberglass Reinforcement: 3/4 oz. chopped strand fiberglass mat
- Saturant Coat: Series 252SC (Resin) at 6.0 12.0 mils
- Topcoat: Series 252SC (Resin) at 4.0 12.0 mils

# 3.0 JOB SET-UP

Prior to starting project installation, note the following:

- Itemize all materials ordered from Tnemec.
- Establish surface preparation requirements.
- Ensure all equipment is readily available and in working order.
- Set-up a mixing area clearly designated at least 50 feet away from heat, sparks, open flames, welding, or other sources of ignition.
- Communicate the installation, safety procedures, and requirements with all persons involved.

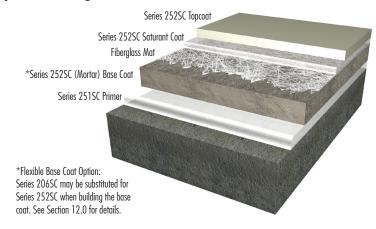

# 4.0 EQUIPMENT

### Surface preparation

- Personal Protective Equipment
- Wet-or Dry-abrasive blasting equipment or Waterjetting equipment
- · Diamond grinder

#### Mixing

- · Volume measure for Part A and B
- 5 gallon empty pails for mixing
- M-B19 "H-Style" box blade mixing paddle
- PS "Jiffy" mixing paddle (liquids only)
- 3/4", 10 amp drill

#### **Application**

- · Scissors or shears for cutting fiberglass mat
- Concrete finishing trowel
- 3/8" 1/2" nap, shed resistant roller cover for priming and saturating glass
- 1/8" rib roller
- Brushes, rollers or spray equipment for applying topcoat

# **5.0 CONCRETE SURFACE PREPARATION**

All new concrete should be allowed to cure 28 days. Verify dryness by testing for moisture with a "plastic film tape-down test" (reference ASTM D 4263). If necessary for testing horizontal surfaces, perform "Standard Test Method for Measure Moisture Vapor Emission Rate of Concrete Subfloor Using Anhydrous Calcium Chloride" (reference ASTM F 1869). Moisture content is not to exceed three pounds per 1,000 sq.ft. in a 24 hour period.

Abrasive blast or equivalent to remove laitance, form release agents, curing compounds, sealers and other contaminants to provide profile per NACE 6/SSPC-SP13, >ICRI-CSP5. Blasting must be performed sufficiently close to the surface to open up surface voids, bug holes, air pockets and other subsurface irregularities. Dry, oil-free air must be used for the blasting operation (reference ASTM D 4285). Large voids and other cavities should be filled with the recommended filler or surfacer (Series 215 Surfacing Epoxy, Series 217 MortarCrete or Series 218 MortarClad). Refer to the appropriate data sheet for specific recommendations.

All dust and blasting debris dust shall be removed by vacuuming or washing prior to application. Cloths shall not be permitted for cleaning blasted surfaces because of possible lint contamination. Brushing or blowing the surface shall not be permitted, as these methods will not dislodge all particles embedded in the surface profile. All surfaces must be clean, dry, free of oil, grease and other contaminants.

### 5.1 OUTGASSING

Outgassing must always be considered a possibility with any concrete substrate. A number of means exist to either eliminate or reduce outgassing. First, application should be accomplished out of direct sunlight and during times when the surface temperature of the concrete is stable or descending. In addition, coating systems may have an exothermic reaction during their cure generating heat on the concrete surface promoting outgassing. The use of primers or resurfacers can help reduce outgassing.

### 5.2 EXPOSED REBAR

When rebar is exposed through the surface preparation or due to construction oversights, the rebar must be properly cleaned and primed. Exposed rebar must be cleaned as per SSPC-SP10 / NACE 2 "Near White Metal Cleaning" and primed using an epoxy primer such as Tnemec Series N69 Hi-Build Epoxoline II or equal. The area around the rebar may then be rebuilt using Series 215 Surfacing Epoxy or Series 218 MortarClad, or in more extreme cases, Series 217 MortarCrete.

# 5.3 TERMINATIONS

When the coating system is not scheduled to provide a monolithic surface, terminations must be built into the system. For example, when the system is scheduled to terminate three feet up the wall, saw cuts must be installed so the system may be keyed into these termination points. Refer to the "Secondary Containment Construction Details Guide" for more information.

### 5.4 PREPARATION OF CMU

Allow new mortar to cure 28 days. Surfaces much be clean, dry, sound and free of all contaminants (Ref. SSPC-SP13/NACE No. 6). Level all protrusions and mortar spatter.

# **6.0 PRIMER INSTALLATION**

# 6.1 SERIES 251SC CHEMBLOC

The primer for the Series 252SC fiberglass mat reinforced, vinyl ester mortar system is Series 251SC ChemBloc, a chemical-resistant, novolac vinyl ester.

### 6.2 SERIES 251SC CHEMBLOC TEMPERATURE REQUIREMENT

### **Storage Temperature**:

Minimum: 35°F (2°C) Maximum: 90°F (32°C)

### **Surface Temperature:**

Minimum: 55°F (16°C) Maximum: 90°F (32°C)

The surface should be dry and at least 5°F (3°C) above the dew point.

**Material Temperature:** This product should not be applied below 60°F (16°C) material temperature.

**Pot Life:** 1-1/2 to 2-1/2 hours at 75°F (24°C)

At higher temperatures, pot life will decrease (use caution in spray equipment). In hot weather, material should be cooled to  $65^{\circ}F$  to  $80^{\circ}F$  ( $18^{\circ}C$  to  $27^{\circ}C$ ) prior to mixing and application to improve workability and avoid shortened pot life.

### 6.3 SERIES 251SC CHEMBLOC PACKAGING

KIT SIZE	PART A	PART B	YIELD (MIXED
Small Kit	1 gallon can	4 oz. bottle	1 gallon

### 6.4 SERIES 251SC CHEMBLOC COVERAGE RATES

DRY MILS (MICRONS)	WET MILS (MICRONS)	SQ.FT./GAL (M <sup>2</sup> /GAL)
4.0 - 12.0 (100-305)	5.5 - 17.0 (140-340)	281-94 (26.1-8.7)

# 6.5 SERIES 251SC CHEMBLOC MIXING AND APPLICATION

**Mixing:** Use a variable speed drill with a PS Jiffy blade. Slowly mix Part A component, and while under agitation add Part B component and mix for a minimum of two minutes. Ensure that all Part B is blended with Part A by scraping the pail walls with a flexible spatula.

**Roller Application:** Use high quality 3/8" to ½" woven nap, shed resistant, roller cover.

**Brush Application:** Use high quality synthetic or nylon bristle brush.

**Horizontal Application:** Squeegee and backroll. Brush small areas only.

**Vertical Application:** Roller apply or spray and backroll. Brush small areas only. Spray application equipment includes an airless spray pump. Pump assembly should include a moisture trap and oiler, air regulator with gauge and fluid outlet drain valve. When spraying, a high pressure manifold and 60 mesh filter is recommended. Use a 1/4" or 3/8" I.D. material hose (2400-3,000 psi working pressure rating). A Graco silver gun or equivalent may be used. The preferred tips with orifices ranging from .015" to .021" should be mounted. **Spraying should be considered as a means to transfer the material to the surface and should be followed by backrolling.** 

# 7.0 BASE COAT INSTALLATION

# 7.1 SERIES 252SC CHEMBLOC (MORTAR)

The trowel-applied mortar base coat for the Series 252SC fiberglass mat reinforced, vinyl ester mortar system is Series 252SC ChemBloc (mortar), a chemical-resistant, novolac vinyl ester.

# 7.2 SERIES 252SC CHEMBLOC (MORTAR) TEMPERATURE REQUIREMENT

# **Storage Temperature**:

Minimum: 40°F (4°C) Maximum: 90°F (32°C)

Material should be stored at temperatures between 70°F and 90°F (21°C and 32°C) for at least 48 hours prior to use.

# **Surface Temperature:**

Minimum: 55°F (13°C) Maximum: 90°F (32°C)

The substrate temperature should be at least 5°F (3°C) above the dew point. Coating will not cure below minimum surface temperature.

**Material Temperature:** For optimum application, handling and performance, the material temperature during application should be between 70°F and 90°F (21°C and 32°C). Temperature will affect the workability. Cool temperatures increase viscosity and decrease workability. Warm temperatures will decrease viscosity and shorten pot life. This product should not be applied below 60°F (16°C) material temperature.

**Pot Life:** 30 to 35 minutes at 75°F (24°C)

Increasing material temperatures will significantly reduce the pot life.

### 7.3 SERIES 252SC CHEMBLOC (MORTAR) PACKAGING

KIT SIZE	PART A	PART B	PART C	YIELD (MIXED)
MCK	3 gallon pail	8 oz. bottle	30 lb. bag	3 gallons

### 7.4 SERIES 252SC CHEMBLOC (MORTAR) COVERAGE RATES

DRY MILS (MICRONS)	WET MILS (MICRONS)	SQ.FT./KIT (M <sup>2</sup> /KIT)
60.0 - 80.0 (1525-2030)	60.0 - 80.0 (1525-2030)	55-73 (5.1-6.8)

# 7.5 SERIES 252SC CHEMBLOC (MORTAR) MIXING AND APPLICATION

**Mixing:** Mix entire kits of all products as supplied. Use a variable speed drill with a M-B19 "H style" box blade. Fully blend the Part A and Part B components for one full minute using the prescribed equipment before adding the Part C. Once the Parts A and B are fully mixed, gradually add the Part C filler to the liquid while under agitation and blend until a uniform consistency is achieved (typically two to three minutes). During the mixing process, scrape the sides and bottom of the container to ensure all of Parts A, B, and C are blended together. The material is then ready for application. *NOTE:* For filled base coat slurry, the Part C filler can be reduced by approximately 6 lbs. or 20%.

**Vertical Applications**: The base coat mortar should be applied with a trowel at approximately 1/16" thick (60-80 mils DFT) while the prime coat is still tacky. Care should be taken to prevent sagging when applying above this recommended thickness. The entire amount of Part C (30 lbs.) is recommended per mixed 1-1/2 gallons of Series 252SC. In hot weather, apply base coat in small areas due to limited working time. When possible, shade areas or utilize natural conditions such as areas not in direct sunlight.

**Horizontal Applications:** For horizontal surfaces, 60-80 mils DFT should be applied as a mortar or slurry. For mortar applications, the entire amount of Part C (30 lbs.) is recommended per mixed 1-1/2 gallons of Series 252SC. The amount of Part C recommended for slurry applications is 24 lbs. This is achieved by reducing the Part C filler by 6 lbs. or 20%.

### 7.6 FIBERGLASS REINFORCEMENT INSTALLATION

**Fiberglass Mat Placement:** Measure the length desired (equal to the area to be base coated). This area will vary with application rate. The glass is best cut with scissors. Roll up the cut piece of mat tightly for easier handling.

While the base coat mortar is still wet, lay and press the fiberglass reinforcing mat into the surface. Using a rib roller, backroll fiberglass to remove any air pockets. Once mat is placed, immediately

saturate mat with Series 252SC saturant coat until fiberglass mat is completely wet out. It is necessary to be especially careful to press the mat firmly into corners.

# 8.0 SATURANT COAT INSTALLATION

# 8.1 SERIES 252SC CHEMBLOC (LIQUIDS)

The saturant coat for the Series 252SC fiberglass mat reinforced, vinyl ester mortar system is Series 252SC ChemBloc (liquids).

### 8.2 SERIES 252SC CHEMBLOC (LIQUIDS) TEMPERATURE REQUIREMENT

See Section 7.2 for temperature details.

### 8.3 SERIES 252SC CHEMBLOC (LIQUIDS) PACKAGING

KIT SIZE	PART A	PART B	PART C	YIELD (MIXED)
RCK	3 gallon pail	8 oz. bottle	N/A	1.5 gallons

# 8.4 SERIES 252SC CHEMBLOC (LIQUIDS) COVERAGE RATES

DRY MILS (MICRONS)	WET MILS (MICRONS)	SQ.FT./KIT (M <sup>2</sup> /KIT)
8.0-12.0 (205-305)	8.0-12.0 (205-305)	160-241 (14.9-22.4)

# 8.5 SERIES 252SC CHEMBLOC (LIQUIDS) APPLICATION

**Saturating:** It is recommended that the saturant coat be applied while the base coat underneath is still wet. The saturating resin is best applied with a short nap roller and large brush in areas where necessary. At overlaps the top layer of mat should be lifted so saturating resin can be applied to the bottom layer. The top layer is then pressed onto the bottom layer and saturated. Use enough saturant to "wet out" the mat, but do not allow the saturant to puddle or run. Saturation is complete when the glass mat has lost its dry white appearance and becomes transluscent. A 1/8" ribbed roller should then be utilized to force out any entrapped air or wrinkles. While the saturant is still wet, an aggregate may be broadcast into the horizontal surface for enhanced slip resistance. Once cured, the reamaining, unadhered aggregate must be swept or vacuumed up before topcoating.

*Note:* Once saturant has cured hard and if an aggregate has not been incorporated into the surface, the glass should be inspected for any imperfections. Grind down any mortar fins or glass spurs. Any voids found underneath the glass should be ground down and patched before topcoating.

# 9.0 TOPCOAT INSTALLATION

# 9.1 SERIES 252SC CHEMBLOC (TOPCOAT)

The topcoat/sealer for the Series 252SC fiberglass mat reinforced, vinyl ester mortar system is Series 252SC ChemBloc (topcoat).

# 9.2 SERIES 252SC CHEMBLOC (TOPCOAT) TEMPERATURE REQUIREMENT

See Section 7.2 for temperature details.

### 9.3 SERIES 252SC CHEMBLOC (TOPCOAT) PACKAGING

See Section 8.3 for packaging details.

### 9.4 SERIES 252SC CHEMBLOC (TOPCOAT) COVERAGE RATES

DRY MILS (MICRONS)	WET MILS (MICRONS)	SQ.FT./GAL (M <sup>2</sup> /GAL)	
4.0-12.0 (100-305)	4.0-12.0 (100-305)	160-481 (14.9-44.7)	

# 9.5 SERIES 252SC CHEMBLOC (TOPCOAT) MIXING AND APPLICATION

**Mixing:** Use a variable speed drill with a PS Jiffy blade. Slowly mix Part A component, and while under agitation add Part B component and mix for a minimum of two minutes. Ensure that all Part B is blended with Part A.

Roller Application: Use high quality 3/8" to ½" woven nap, shed resistant, roller cover.

**Brush Application:** Use high quality synthetic or nylon bristle brush.

**Horizontal Application:** Squeegee and backroll. Brush small areas only.

**Vertical Application:** It is recommended that the base coat be applied using a high quality 3/8" to 1/2" woven nap, shed resistant, roller cover.

# **10.0 UV-RESISTANT URETHANE TOPCOAT (OPTIONAL)**

An optional UV-resistant topcoat of Series 290 CRU can be applied to the system to prevent sunlight degradation of Series 252SC. Series 290 may not withstand chemical exposures and should be considered a "sacrificial" coating. Periodic maintenance should be performed to reestablish any chemically attacked coating.

# 11.0 FLEXIBLE BASE COAT (OPTIONAL)

When a flexible, crack bridging base coat is required, Series 206SC ChemBloc resin may be substituted for Series 252SC ChemBloc resin when building the base coat. When Series 206SC ChemBloc is used as the base coat, Series 201 Epoxoprime should be substituted for the Series 251SC ChemBloc primer, and Series 239SC ChemBloc should be substituted for the Series 252SC ChemBloc saturant coat.

### 11.1 SERIES 201 EPOXOPRIME (PRIMER)

The primer for the Series 206SC/239SC/252SC flexible, fiberlass mat reinforced, vinyl ester mortar system is Series 201 Epoxoprime, a moisture-tolerant, modified polyamine epoxy.

## 11.1.1 SERIES 201 EPOXOPRIME (PRIMER)TEMPERATURE REQUIREMENT

### **Storage Temperature**:

Minimum: 40°F (4°C) Maximum: 90°F (32°C)

Material should be stored at temperatures between 70°F and 90°F (21°C and 32°C) for at least 48 hours prior to use.

#### **Surface Temperature:**

Minimum: 55°F (13°C) Maximum: 90°F (32°C)

The substrate temperature should be at least 5°F (3°C) above the

dew point.

**Material Temperature:** For optimum application, handling and performance, the material temperature during application should be between 70°F and 90°F (21°C and 32°C). Temperature will affect the workability. Cool temperatures increase viscosity and decrease workability. Warm temperatures will decrease viscosity and shorten pot life.

**Pot Life:** 25 to 30 minutes at 75°F (24°C)

Material temperatures above 90°F will significantly reduce the pot life.

# 11.1.2 SERIES 201 EPOXOPRIME (PRIMER) PACKAGING

Two (2) Parts A to One (1) Part B by volume

KIT SIZE	PART A	PART B	YIELD (MIXED)
Extra Large Kit	2-55 gallon drums	1-55 gallon drum	165 gallons
Large Kit	2-5 gallon pails	1-5 gallon pail	15 gallons
Small Kit	2-1 gallon cans	1-1 gallon can	3 gallons

### 11.1.3 SERIES 201 EPOXOPRIME (PRIMER) COVERAGE RATES

DRY MILS (MICRONS)	WET MILS (MICRONS)	SQ.FT./GAL (M <sup>2</sup> /GAL)
6.0 - 12.0 (150-305)	6.0 - 12.0 (150-305)	134-267 (12.2-24.8)

# 11.1.4 SERIES 201 EPOXOPRIME (PRIMER) MIXING AND APPLICATION

**Mixing:** Use a variable speed drill with a PS Jiffy blade. Slowly mix Part A component, and while under agitation add Part B component and mix for a minimum of two minutes. Ensure that all Part B is blended with Part A by scraping the pail walls with a flexible spatula.

Roller Application: Use high quality 3/8" to ½" woven nap, shed resistant, roller cover.

**Brush Application:** Use high quality synthetic or nylon bristle brush.

**Horizontal Application:** Squeegee and backroll. Brush small areas only.

**Vertical Application:** Roller apply or spray and backroll. Brush small areas only. Spray application equipment includes a Graco "King" 45:1 or 56:1 airless spray pump or other airless spray equipment of equal or greater configuation and capability. Pump assembly should include a moisture trap and oiler, air regulator with gauge and fluid outlet drain valve. When spraying, a high pressure manifold and 60 mesh filter is recommended. Use a 3/8" to 1/2" I.D. matrerial hose (4,000-5,000 psi working pressure rating). A Graco silver gun or equivalent may be used. The preferred tips with orifices ranging from .019" to .033" should be mounted in a Graco H.D. RAC Housting/Guard assembly. The suggested operating air pressure is 80 to 90 psi. **Spraying should be considered as a means to transfer the material to the surface and should be followed by backrolling.** 

### 11.2 SERIES 206SC CHEMBLOC (MORTAR)

The base coat (mortar) for the Series 206SC/239SC/252SC flexible, fiberglass mat reinforced, vinyl ester mortar system is Series 206SC ChemBloc, a glass-reinforced, modified flexible polyamine epoxy mortar.

# 11.2.1 SERIES 206SC CHEMBLOC (MORTAR) TEMPERATURE REQUIREMENT

### **Storage Temperature**:

Minimum: 40°F (4°C) Maximum: 90°F (32°C)

Prior to application, the material should be stored at temperatures between 70°F and 90°F (21°C and 32°C) for at least 48 hours prior to use.

### **Surface Temperature:**

Minimum: 55°F (13°C) Maximum: 90°F (32°C)

The substrate temperature should be at least 5°F (3°C) above the dew point. Coating will not cure below minimum surface temperature.

**Material Temperature:** For optimum application, handling and performance, the material temperature during application should be between 70°F and 90°F (21°C and 32°C). Temperature will affect the workability. Cool temperatures increase viscosity and decrease workability. Warm temperatures will decrease viscosity and shorten pot life.

**Pot Life:** 30 to 40 minutes at 75°F (24°C)

# 11.2.2 SERIES 206SC CHEMBLOC (MORTAR) PACKAGING

Three: Part A (epoxy), Part B (amine), and Part C (aggregate)

KIT SIZE PART A PART B PART C YIELD (MIXED)

MCK 1 gallon can 1/2 gallon can 30 lb. bag 3 gallons

# 11.2.3 SERIES 206SC CHEMBLOC (MORTAR) COVERAGE RATES

DRY MILS (MICRONS)	WET MILS (MICRONS)	SQ.FT./KIT (M <sup>2</sup> /KIT)	
60.0-80.0 (1525-2030)	60.0-80.0 (1525-2030)	61-81 (5.6-7.5)	

### 11.2.4 SERIES 206SC CHEMBLOC (MORTAR) MIXING AND APPLICATION

Mixing: Mix entire kits of all products as supplied. Use a variable speed drill with a M-B19 "H style" box blade. Fully blend the Part A and Part B components for one full minute using the prescribed equipment before adding the Part C. Once the Parts A and B are fully mixed, gradually add the Part C filler to the liquid while under agitation and blend until a uniform consistency is achieved (typically two to three minutes). During the mixing process, scrape the sides and bottom of the container to ensure all of Parts A, B, and C are blended together. The material is then ready for application. NOTE: For filled basecoat slurry, the Part C filler can be reduced by approximately 6 lbs. or 20%.

**Vertical Applications**: The base coat mortar should be applied with a trowel at approximately 1/16" thick (60-80 mils DFT) while the prime coat is still tacky. Care should be taken to prevent sagging when applying above this recommended thickness. The entire amount of Part C (30 lbs.) is recommended per mixed 1-1/2 gallons of Series 206SC. In hot weather, apply basecoat in small areas due to limited working time. When possible, shade areas or utilize natural conditions such as areas not in direct sunlight.

**Horizontal Applications:** For horizontal surfaces, 60-80 mils DFT should be applied as a mortar or slurry. For mortar applications, the entire amount of Part C (30 lbs.) is recommended per mixed 1-1/2 gallons of Series 206SC. The amount of Part C recommended for slurry applications is 24 lbs. This is achieved by reducing the Part C filler by 6 lbs. or 20%.

#### 11.3 FIBERGLASS REINFORCEMENT INSTALLATION

**Fiberglass Mat Placement:** Measure the length desired (equal to the area to be base coated). This area will vary with application rate. The glass is best cut with scissors. Roll up the cut piece of mat tightly for easier handling.

While the base coat mortar is still wet, lay and press the fiberglass reinforcing mat into the surface. Using a rib roller, backroll fiberglass to remove any air pockets. Once mat is placed, immediately saturate mat with Series 239SC saturant coat until fiberglass mat is completely wet out. It is necessary to be especially careful to press the mat firmly into corners.

### 11.4 SERIES 239SC CHEMBLOC (LIQUIDS)

The saturant coat for the Series 206SC/239SC/252SC flexible, fiberglass mat reinforced, vinyl ester mortar system is Series 239SC ChemBloc (liquids).

#### 11.4.1 SERIES 239SC CHEMBLOC (LIQUIDS) TEMPERATURE REQUIREMENT

### **Storage Temperature**:

Minimum: 40°F (4°C) Maximum: 90°F (32°C)

Material should be stored at temperatures between 70°F and 90°F (21°C and 32°C) for at least 48 hours prior to use.

# **Surface Temperature:**

Minimum: 55°F (13°C) Maximum: 90°F (32°C)

The substrate temperature should be at least  $5^{\circ}F$  ( $3^{\circ}C$ ) above the dew point. Coating will not cure below minimum surface temperature.

**Material Temperature:** For optimum application, handling and performance, the material temperature during application should be between 70°F and 90°F (21°C and 32°C). Temperature will affect the workability. Cool temperatures increase viscosity and decrease workability. Warm temperatures will decrease viscosity and shorten pot life.

**Pot Life:** 30 to 35 minutes at 75°F (24°C)

### 11.4.2 SERIES 239SC CHEMBLOC (LIQUIDS) PACKAGING

KIT SIZE	PART A	PART B	PART C	YIELD (MIXED)
RCK	1 gallon can	1/2 gallon can	N/A	1.5 gallons

### 11.4.3 SERIES 239SC CHEMBLOC (LIQUIDS) COVERAGE RATES

DRY MILS (MICRONS)	WET MILS (MICRONS)	SQ.FT./KIT (M <sup>2</sup> /KIT)
8.0-12.0 (205-305)	8.0-12.0 (205-305)	201-301 (18.6-27.9)

# 11.4.4 SERIES 239SC CHEMBLOC (LIQUIDS) MIXING AND APPLICATION

**Mixing:** Use a variable speed drill with a PS Jiffy blade. Slowly mix Part A component, and while under agitation add Part B component and mix for a minimum of two minutes. Ensure that all Part B is blended with Part A by scraping the pail walls with a flexible spatula.

**Saturating:** It is recommended that the saturant coat be applied while the base coat underneath is still wet. The saturating resin is best applied with a short nap roller and large brush in areas where necessary. Material may be thinned up to 10% with #2 thinner to facilitate better roller application over the fiberglass mat. At overlaps the top layer of mat should be lifted so saturating resin can be applied to the bottom layer. The top layer is then pressed onto the bottom layer and saturated. Use enough saturant to "wet out" the mat, but do not allow the saturant to puddle or run. Saturation is complete when the glass mat has lost its dry white appearance and becomes transluscent. A 1/8" ribbed roller should then be utilized to force out any entrapped air or wrinkles. While the saturant is still wet, an aggregate may be broadcast into the horizontal surface for enhanced slip resistance. Once cured, the reamaining, unadhered aggregate must be swept or vacuumed up before topcoating.

*Note:* Once saturant has cured hard and if an aggregate has not been incorporated into the surface, the glass should be inspected for any imperfections. Grind down any mortar fins or glass spurs. Any voids found underneath the glass should be ground down and patched before topcoating. Refer to Tech Bulletin 98-11 for more information.

### 11.5 SERIES 252SC CHEMBLOC (TOPCOAT)

The topcoat/sealer for the Series 206SC/239SC/252SC flexible, fiberglass mat reinforced, vinyl ester mortar system is Series 252SC ChemBloc, a novolac vinyl ester.

# 11.5.1 SERIES 252SC CHEMBLOC (TOPCOAT) TEMPERATURE REQUIREMENT

### **Storage Temperature**:

Minimum: 40°F (4°C) Maximum: 90°F (32°C)

Material should be stored at temperatures between 70°F and 90°F (21°C and 32°C) for at least 48 hours prior to use.

### **Surface Temperature:**

Minimum: 55°F (13°C) Maximum: 90°F (32°C)

The substrate temperature should be at least 5°F (3°C) above the dew point. Coating will not cure below minimum surface temperature.

**Material Temperature:** For optimum application, handling and performance, the material temperature during application should be between 70°F and 90°F (21°C and 32°C). Temperature will affect the workability. Cool temperatures increase viscosity and decrease workability. Warm temperatures will decrease viscosity and shorten pot life. This product should not be applied below 60°F (16°C) material temperature.

**Pot Life:** 30 to 35 minutes at 75°F (24°C)

Increasing material temperatures will significantly reduce the pot life.

### 11.5.2 SERIES 252SC CHEMBLOC (TOPCOAT) PACKAGING

KIT SIZE	PART A	PART B	PART C	YIELD (MIXED)	
RCK	3 gallon pail	8 oz. bottle	N/A	1.5 gallons	

# 11.5.3 SERIES 252SC CHEMBLOC (TOPCOAT) COVERAGE RATES

DRY MILS (MICRONS)	WET MILS (MICRONS)	SQ.FT./KIT (M <sup>2</sup> /KIT)
4.0 - 12.0 (100-305)	4.0 - 12.0 (100-305)	160-481 (14.9-44.7)

# 11.5.4 SERIES 252SC CHEMBLOC (TOPCOAT) MIXING AND APPLICATION

**Mixing:** Use a variable speed drill with a PS Jiffy blade. Slowly mix Part A component, and while under agitation add Part B component and mix for a minimum of two minutes. Ensure that all Part B is blended with Part A.

**Roller Application:** Use high quality 3/8" to ½" woven nap, shed resistant, roller cover.

**Brush Application:** Use high quality synthetic or nylon bristle brush.

**Horizontal Application:** Squeegee and backroll. Brush small areas only.

**Vertical Application:** It is recommended that the base coat be applied using a high quality 3/8" to 1/2" woven nap, shed resistant, roller cover.

# 12.0 INSPECTION

Examine the application for any air bubbles or blisters. If present, they must be cut out and repaired. Refer to Tnemec Technical Bulletin 98-11 for additional information.

High voltage discontinuity (spark) testing may be used to determine the presence and number of discontinuities in the nonconductive Series 280 Tneme-Glaze applied to a conductive surface.

All high voltage discontinuity (spark) testing shall be performed in accordance with NACE RP0188 and the procedures outlined herein.

Coatings shall be applied and allowed to cure within the parameters of the corresponding Product Data Sheets. Sufficient curing time of the coating system shall be allowed prior to conducting a holiday test, as indicated by the "To Place in Service" duration on the Product Data Sheets. Curing time will vary with surface temperature, air movement, humidity, and film thickness.

If the substrate is incompatible or if thickness constraints are not applicable for a non-destructive dry film thickness gauge, measurements of the coating system thickness are to be performed during application of each system component using a wet film gauge, feeler gauge, or other measurement device that can accurately measure the coating wet film thickness. These coating measurements are to be tabulated to determine the total system thickness.

All high voltage discontinuity (spark) testing shall be performed using a Tinker & Rasor model AP/W Holiday Detector. Refer to the following chart for appropriate voltage based on coating system thickness

To perform holiday testing attach a ground wire from the instrument ground output terminal to the conductive substrate and ensure proper electrical contact. Test conductivity by attaching the instrument ground wire to rebar or other metallic ground permanently installed in the concrete and touch the electrode to the bare concrete. If metallic ground is not visible, the ground wire can be placed directly against a bare concrete surface and weighted with a damp cloth and sand-filled paper bag. Make contact with the exploring electrode on the conductive substrate to verify the instrument is properly grounded. If the test proves negative, determining discontinuities with a high voltage spark test will be ineffective. Under no circumstances shall the voltage be increased above the recommended voltage potential.

# RECOMMENDED VOLTAGES FOR HIGH VOLTAGE SPARK TESTING WITH TINKER & RASOR MODEL AP/W

Total Dry Film Thickness (mils)	Voltages (V)	Total Dry Film Thickness (mils)	Voltages (V)
20-24	2,500	100-124	12,500
25-29	3,000	125-134	15,000
30-39	3,500	135-159	16,000
40-47	5,000	160-174	17,500
48-59	6,000	175-214	20,000
60-69	7,500	215-269	27,000
70-79	8,500	270-299	31,000
80-99	10,000	300-350	35,000

Holiday testing of repaired areas shall be performed using same testing procedures as outlined above.

If utilizing alternate high voltage DC holiday detectors, never exceed 100 volts DC per mil or contact Tnemec Technical Services for recommended voltage settings. Excessive voltage may produce a holiday in the coating film.

# 13.0 REPAIR

For patching and repairing small areas, less than 1 sqft, grind affected area and reapply as per initial instructions. Overlap 1" to 2" onto the existing material and square off with masking tape. Make sure areas for overlap are scarified and feathered. Small repairs may be completed by adding fumed silica to Series 252SC.

# 14.0 CURING

Allow 24 hours final cure before placing into service. Contact Tnemec Technical Service if deviations are required.

# 15.0 CLEANUP

Clean all equipment immediately after use with a compatible solvent such as Xylene or Methyl Ethyl Ketone (MEK). Hands can be cleaned with soap and water.

# **16.0 STORAGE & HANDLING**

All materials must be stored between 40°F (10°C) and 90°F (32°C). Prior to application, the material must be between 70°F and 90°F (21°C and 32°C) for at least 48 hours. For optimum application, handling and performance, the surface, air and material temperatures during application should be between 70°F and 90°F (21°C and 32°C). For applications below 70°F, contact your Tnemec representative for instructions and precautions. The surface and air temperature should be at least 5°F above the dew point and the relative humidity should be below 75 percent.

# **17.0 SAFETY**

These products may contain solvents and/or other chemical ingredients. Adequate health and safety precautions should be observed during storage, handling, application and curing. For information regarding the potential hazards associated with these products, please refer to the container label or request a Material Safety Data Sheet from Tnemec Company, Inc. at 1-800-TNEMEC1 or www.tnemec.com.

# **18.0 CHEMICAL RESISTANCE CHART**

CHEMICAL & CONCENTRATION	RESULT
Aluminum Chloride	OK
Aluminum Sulfate 49%	OK
Ammonium Fluosilicate	OK
Ammonium Hydroxide 5-50%	OK
Bromine 5%	OK
Calcium Carbonate	OK
Calcium Hydroxide	OK
Calcium Hypochlorite 5%	OK
Calcium Oxide 1%	OK
Carbon Dioxide	OK
Citric Acid 5-50%	OK
Chlorine Dioxide	OK
Copper Sulfate	OK
Ferric Chloride 5-43%	OK
Ferric Sulfate	OK
Fluosilicic Acid 35%	OK
Hydrochloric Acid 5-30%	OK
Hydrogen Peroxide 30%	OK
Methanol	OK
Phosphoric Acid 10-85%	OK
Polyalumium Chloride	OK

CHEMICAL & CONCENTRATION	RESULT
Potassium Permanganate	OK
Sodium Aluminate	OK
Sodium Bicarbonate	OK
Sodium Bisulfate	OK
Sodium Carbonate	OK
Sodium Fluoride	OK
Sodium Hexametaphosphate	OK
Sodium Hydroxide 10-50%	OK
Sodium Hypochlorite 3-13%	OK
Sodium Silicate	OK
Sodium Sulfate	OK
Sodium Sulfite	OK
Sodium Silicofluoride	OK
Sulfuric Acid 10-80%	OK
Sulfur Dioxide	OK
Tetrasodium Pyrophosphate	OK

OK: Secondary Containment

NR: Not Recommended

Exposures are based on continuous contact with chemical for up to 72 hours. EPA regulations require removal within 48 hours or in as timely a manner as possible. Softening or discoloration may occur during exposure.